

## D3200 Factory Presets

Preset	Output Channels	Input Channels All Presets (CH 1 Left, CH 2 Right)
--------	-----------------	--

### STEREO 8/4 Ω Presets

### All presets (typical 1 sub and 4 satellites)

01) 6.5HD Stereo	Ch 1 NC, Ch 2 Left, Ch 3 Right
02) 10HDR_6.5HD	Ch 1 sub, Ch 2 Left, Ch 3 Right
03) 10BP-IG_6.5HD	Ch 1 sub, Ch 2 Left, Ch 3 Right
04) 12HDR_6.5HD	Ch 1 sub, Ch 2 Left, Ch 3 Right
05) 12BPIG_6.5HD	Ch 1 sub, Ch 2 Left, Ch 3 Right
06) 12HDR_6.5HD2	Ch 1sub, Ch 2 Left, Ch 3 Right
07) 12BPIG_6.5HD2	Ch 1 sub, Ch 2 Left, Ch 3 Right
08) 10HDR_LSR8	Ch 1sub, Ch 2 Left, Ch 3 Right
09) 10BPIG_LSR8	Ch 1 sub, Ch 2 Left, Ch 3 Right
10) S11BP_LSR8	Ch 1 sub, Ch 2 Left, Ch 3 Right
11) 12HDR_LSR8	Ch 1 sub, Ch 2 Left, Ch 3 Right
12) 12BPIG_LSR8	Ch 1 sub, Ch 2 Left, Ch 3 Right
13) 10HDR_LSR6	Ch 1 sub, Ch 2 Left, Ch 3 Right
14) 10BPIG_LSR6	Ch 1 NC, Ch 2 Left, Ch 3 Right
15) S11BP_LSR6	Ch 1 sub, Ch 2 Left, Ch 3 Right
16) 12HDR_LSR6	Ch 1 sub, CH 2 Left, Ch 3 Right
17) 12BPIG_LSR6	Ch 1 sub, Ch 2 Left, Ch 3 Right

### STEREO (8/4 Ω Sub), (70v Satellites) (max number of Satellites each CH 2 & 3) 6.5HD = 6, LSR80 = 6, LSR60 = 8

18) 10HDR_6.5 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
19) 10BPIG_6.570v	Ch 1 sub, Ch 2 Left, Ch 3 Right
20) 12HDR_6.5 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
21) 12BPIG_6.570v	Ch 1 sub, Ch 2 Left, Ch 3 Right
22) 10HDR_LS8 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
23) 10BPIG_LS870v	Ch 1 sub, Ch 2 Left, Ch 3 Right
24) S11BP_LS8 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
25) 12HDR_LS8 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
26) 12BPIG_LS870v	Ch 1 sub, Ch 2 Left, Ch 3 Right
27) 10HDR_LS6 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
28) 10BPIG_LS670v	Ch 1 sub, Ch 2 Left, Ch 3 Right
29) S11BP_LS6 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
30) 12HDR_LS6 70v	Ch 1 sub, Ch 2 Left, Ch 3 Right
31) 12BPIG_LS670v	Ch 1 sub, Ch 2 Left, Ch 3 Right

NOTE: To load a preset from the front panel. Press menu, (screen reads load), turn select knob to desired preset, push enter/select knob, (screen reads Load Preset? NO/yes), turn select knob (screen reads no/YES), push enter/select knob to load preset.

**STEREO 70v subs and satellites, (max # subs on Ch 1 = 3), (max # satellites each Ch 2 & 3) LSR60 = 8, LSR80 & 6.5HD = 6**

32) 10s70v_6.570v	Ch 1 sub (10HDR-70v or 10BP-IG-70v), Ch 2 Left, Ch 3 Right
33) 12s70v_6.570v	Ch 1 sub (12HDR-70v or 12BP-IG-70v), Ch 2 Left, Ch 3 Right
34) 10s70v_LS870v	Ch 1 sub (10HDR-70v or 10BP-IG-70v), Ch 2 Left, Ch 3 Right
35) 11s70v_LS870v	Ch 1 sub (S11BP-70v), Ch 2 Left, Ch 3 Right
36) 12s70v_LS870v	Ch 1 sub (12HDR-70v or 12BP-IG-70v), Ch 2 Left, Ch 3 Right
37) 10s70v_LS670v	Ch 1 sub (10HDR-70v or 10BP-IG-70v-70v), Ch 2 Left, Ch 3 Right
38) 11s70v_LS670v	Ch 1 sub (S11BP-70v), Ch 2 Ch 2 Left, Ch 3 Right
39) 12s70v_LS670v	Ch 1 sub (12HDR-70v or 12BPIG-70v), Ch 2 Left, Ch 3 Right

**MONO 70v Presets (for two wire run /4 conductor), systems.**

Ch 2 pinout= +1 and -2 (Ch 2 & 3 bridge mode) See D3200 owner's manual

(max # of subs on CH 1= 3) (max # of satellites on Ch 2= 6.5HD-70v and LSR80=10, LSR60=14)

40) 10s_6.5 70Vmo	Ch 1 sub (10HDR-70v or 10BP-IG-70v), Ch 2 satellites, Ch 3 = NC
41) 12s_6.5 70Vmo	Ch 1 sub (12HDR-70v or 12BP-IG-70v), Ch 2 satellites, Ch 3 = NC
42) 10s_LS8 70Vmo	Ch 1 sub (10HDR-70v or 10BP-IG-70v), Ch 2 satellites, Ch 3 = NC
43) 11s_LS8 70Vmo	Ch 1 sub (S11BP-70v), Ch 2 satellites, Ch 3 = NC
44) 12s_LS8 70Vmo	Ch 1 sub (12HDR-70v or 12BP-IG-70v), Ch 2 satellites, Ch 3 = NC
45) 10s_LS6 70Vmo	Ch 1 sub (10HDR-70v or 10BP-IG-70v), Ch 2 satellites, Ch 3 = NC
46) 11s_LS6 70Vmo	Ch 1 sub (S11BP-70v) Ch 2 satellites, Ch 3 = NC
47) 12s_LS6 70Vmo	Ch 1 sub (12HDR-70v or 12BP-IG-70v) Ch 2 satellites, Ch 3 = NC

**NOTE: All Presets were developed using 1 sub and 4 satellites. Depending on number of subwoofers and satellites used, subwoofer level may need to be adjusted. To adjust subwoofer level using ASC Console Software (recommended) see ASC Console owner's manual. To adjust from D3200 front panel see D3200 owner's manual.**

**DEMO Presets (One subwoofer and pair satellites)**

58) Demo12s_6.5HD	Ch 1 = (12HDR or 12BP-IG), (Ch 2 & 3=6.5HD)
59) Demo12s_LSR8	Ch 1 = (12HDR or 12BP-IG), (Ch 2 & 3=LSR80)
60) Demo12s_LSR6	Ch 1 = (12HDR or 12BP-IG), (Ch 2 & 3=LSR60)

**NOTE: To load a preset from the front panel. Press menu, (screen reads load), turn select knob to desired preset, push enter/select knob, (screen reads Load Preset? NO/yes), turn select knob (screen reads no/YES), push enter/select knob to load preset.**